



AUTOTECKNIC

AutoTecknic Replacement Dry Carbon Mirror Covers Installation Instruction

E84 X1 | F20/ F21 1-Series | F22/ F23 2-Series | F30/ F31/ F34 3-Series | F32/ F36 4-Series | F87 M2



1. Grab and pull the OEM cap off starting from the top edge, then pull straight out.




2. Tilt the mirror lens up as much as possible, then using a plastic panel tool or similar pull the lens outward at a slight upward motion.




3. You'll see the wires for the mirror lens/heating element. They do not need to be unclipped if you rest it on the window sill.



4. Locate the 3 tabs that are located where the OEM cap clips in.

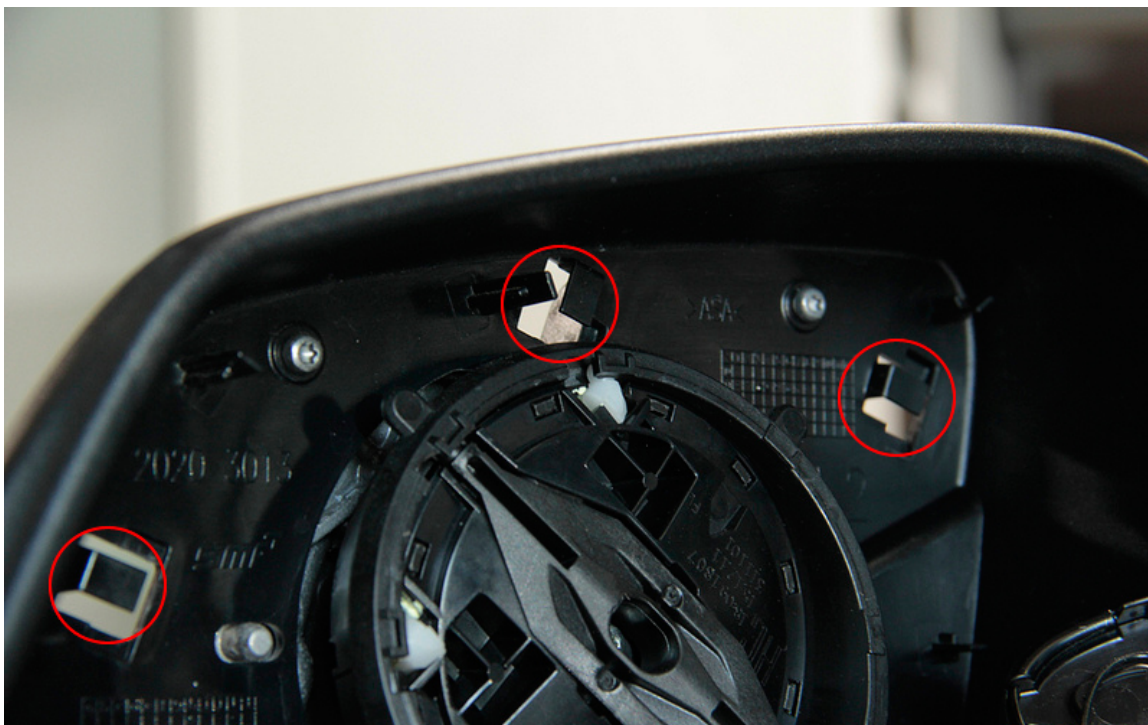

5. Push in and break off the 3 tabs.

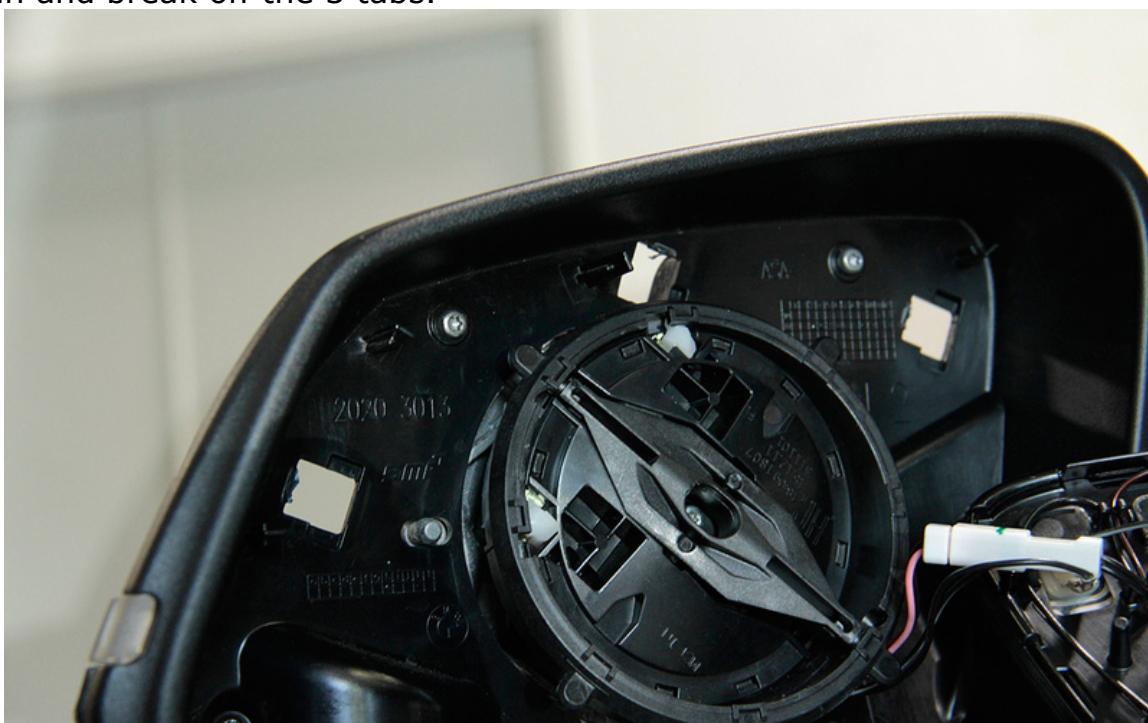

6. Put the mirror cap on the front side making sure it rests in the little catches.



7. New holes for the mounting screws and washers to go into.





8. Install hardware, and clip mirror back in, so that it's orientated with the plastic receivers.



9. Clean up your fingerprints with a clean microfiber towel, and admire your work!